


# BY-5L 自润滑翻边导向套 Oilless Flanged Guide Bushes



运动方向

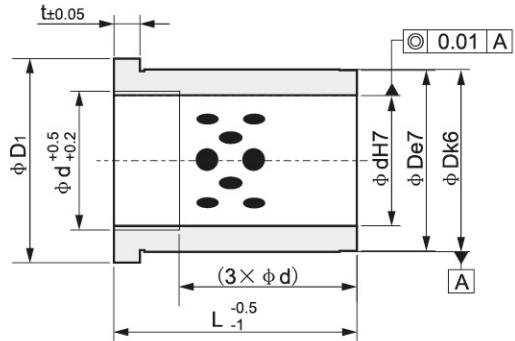

单位Unit: mm

型号 Parts No.	d	L	t	D	Tolerance		D <sub>1</sub>	d H7	
					e7	k6			
BY-5L-9x12	9	12	3	14	-0.032 -0.050	+0.012 +0.001	16	9	+0.015 0
BY-5L-9x17	"	17	"	"	"	"	"	"	"
BY-5L-9x22	"	22	"	"	"	"	"	"	"
BY-5L-9x27	"	27	"	"	"	"	"	"	"
BY-5L-9x36	"	36	"	"	"	"	"	10	"
BY-5L-10x12	10	12	"	"	"	"	"	"	"
BY-5L-10x17	"	17	"	"	"	"	"	"	"
BY-5L-10x22	"	22	"	"	"	"	"	"	"
BY-5L-10x27	"	27	"	"	"	"	"	"	"
BY-5L-10x36	"	36	"	"	"	"	"	"	"
BY-5L-12x17	12	17	6	18	"	"	23	12	+0.018 0
BY-5L-12x22	"	22	"	"	"	"	"	"	"
BY-5L-12x27	"	27	"	"	"	"	"	"	"
BY-5L-12x36	"	36	"	"	"	"	"	"	"
BY-5L-14x17	14	17	"	20	-0.040 -0.061	+0.015 +0.002	25	14	"
BY-5L-14x22	"	22	"	"	"	"	"	"	"
BY-5L-14x27	"	27	"	"	"	"	"	"	"
BY-5L-14x36	"	36	"	"	"	"	"	"	"
BY-5L-14x46	"	46	"	"	"	"	"	"	"
BY-5L-14x56	"	56	"	"	"	"	"	"	"
BY-5L-17x17	17	17	"	"	"	"	"	25	"
BY-5L-17x22	"	22	"	"	"	"	"	"	"
BY-5L-17x27	"	27	"	"	"	"	"	"	"
BY-5L-17x36	"	36	"	"	"	"	"	"	"
BY-5L-17x46	"	46	"	"	"	"	"	"	"
BY-5L-17x56	"	56	"	"	"	"	"	"	"

型号 Parts No.	d	L	t	D	Tolerance		D <sub>1</sub>	d H7	
					e7	k6			
BY-5L-16x17	16	17	6	22	-0.040 -0.061	+0.015 +0.002	27	16	+0.018 0
BY-5L-16x22	"	22	"	"	"	"	"	"	"
BY-5L-16x27	"	27	"	"	"	"	"	"	"
BY-5L-16x36	"	36	"	"	"	"	"	"	"
BY-5L-16x46	"	46	"	"	"	"	"	"	"
BY-5L-16x56	"	56	"	"	"	"	"	"	"
BY-5L-18x17	18	17	"	26	"	"	31	18	"
BY-5L-18x22	"	22	"	"	"	"	"	"	"
BY-5L-18x27	"	27	"	"	"	"	"	"	"
BY-5L-18x36	"	36	"	"	"	"	"	"	"
BY-5L-18x46	"	46	"	"	"	"	"	"	"
BY-5L-18x56	"	56	"	"	"	"	"	"	"
BY-5L-18x66	"	66	"	"	"	"	"	"	"
BY-5L-20x17	20	17	"	"	"	"	"	20	+0.021 0
BY-5L-20x22	"	22	"	"	"	"	"	"	"
BY-5L-20x27	"	27	"	"	"	"	"	"	"
BY-5L-20x36	"	36	"	"	"	"	"	"	"
BY-5L-20x46	"	46	"	"	"	"	"	"	"
BY-5L-20x56	"	56	"	"	"	"	"	"	"
BY-5L-20x66	"	66	"	"	"	"	"	"	"